

USER MANUAL

DPR-1260

VERSION 1.3



D-Link[®]

WIRELESS

Table of Contents

Chapter 1 - Product Overview	3	Network Settings.....	25
Safety Precautions	3	Wireless Settings	26
Package Contents	4	Administration Settings	28
System Requirements.....	4	Update Firmware	29
Introduction	5	Support	30
Hardware Overview.....	6	Menu	30
Connections	6	Supported Devices.....	31
LEDs	7	Glossary.....	31
Chapter 2 - Installation.....	8	Chapter 4 - Wireless Security	32
Setting up the DPR-1260	8	What is WEP?	32
Wireless Installation Considerations	9	What is WPA?.....	33
UPnP Setup	10	Configure WEP.....	34
UPnP Installation	13	Configure WPA-PSK.....	35
Chapter 3 - Configuration	14	Chapter 5 - Troubleshooting	36
Web-based Configuration Utility.....	14	Appendix A - Wireless Basics	39
Status.....	15	What is Wireless?.....	40
Device Information	15	Tips	42
Wireless Status	16	Wireless Modes.....	43
Wireless Networks	17	Appendix B - Networking Basics	44
Scan.....	18	Check your IP address	44
Advanced Settings	19	Statically Assign an IP address.....	45
Printer	19	Appendix C - Technical Specifications	46
Wireless	20	Appendix D - Contact Technical Support	48
System	21	Appendix E - Warranty	49
Setup.....	22	Appendix F - Registration.....	55
Setup Wizard.....	22		

Chapter 1 - Product Overview

This chapter provides a physical and functional overview of the DPR-1260.

Safety Precautions

- Unplug this device from its power source before cleaning. Use only a slightly dampened cloth for cleaning. Do not use liquid or aerosol cleaners.
- Avoid using this device near water. Exposure to water may cause an electric-shock.
- Do not place the Wireless Print Server on an unstable surface. The device may fall causing serious damage to the device.
- This device should only be used with the power supply included with this product.
- Do not pinch, crimp or otherwise damage the power cord. If exposed to foot traffic, ensure that the cable is properly shielded and does not pose a tripping hazard.
- If using an extension cord, make sure the total current rating of the products using the cord does not exceed the extension cord's current rating.
- Do not attempt to service this device. Opening or removing the case may expose you to dangerous voltage points or other risks.

Package Contents

- RangeBooster G™ Multi-Function Print Server
- Detachable Antenna
- CAT5 Ethernet Cable
- Power Adapter
- CD-ROM with Manual and Warranty

Note: Using a power supply with a different voltage rating than the one included with the DPR-1260 will cause damage and void the warranty for this product.



System Requirements

- 10/100 Fast Ethernet Wired or 802.11b/g Wireless Network
- Printer with USB Port*
- Computer with:
 - Windows® XP (SP2) or Windows® 2000 (SP4)
 - Internet Explorer 6.0 or Mozilla Firefox 1.5 or higher
 - CD-ROM Drive
 - Network Interface Card

* For a list of compatible printers, visit <http://support.dlink.com>.

Introduction


D-Link's new Rangebooster G™ Multi-Function Print Server (DPR-1260) allows you to wirelessly share up to 4 USB Multi-Function Printers (MFP) on your network. This innovative new print server allows multiple users to Print or Scan using one of the four connected MFP printers. By supporting multiple MFP Printers over a wireless connection, this new print server is the ideal solution for your home, the classroom, or office.

Simply plug your USB printer into one of the four ports, run the automatic configuration wizard, and you are ready to start printing and scanning over your wireless network. For extra network connectivity, you can also use the Ethernet port on the DPR-1260 to provide wireless connectivity to any Ethernet-enabled device, such as a computer or Network-Attached Storage (NAS)

* Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

Hardware Overview

Connections

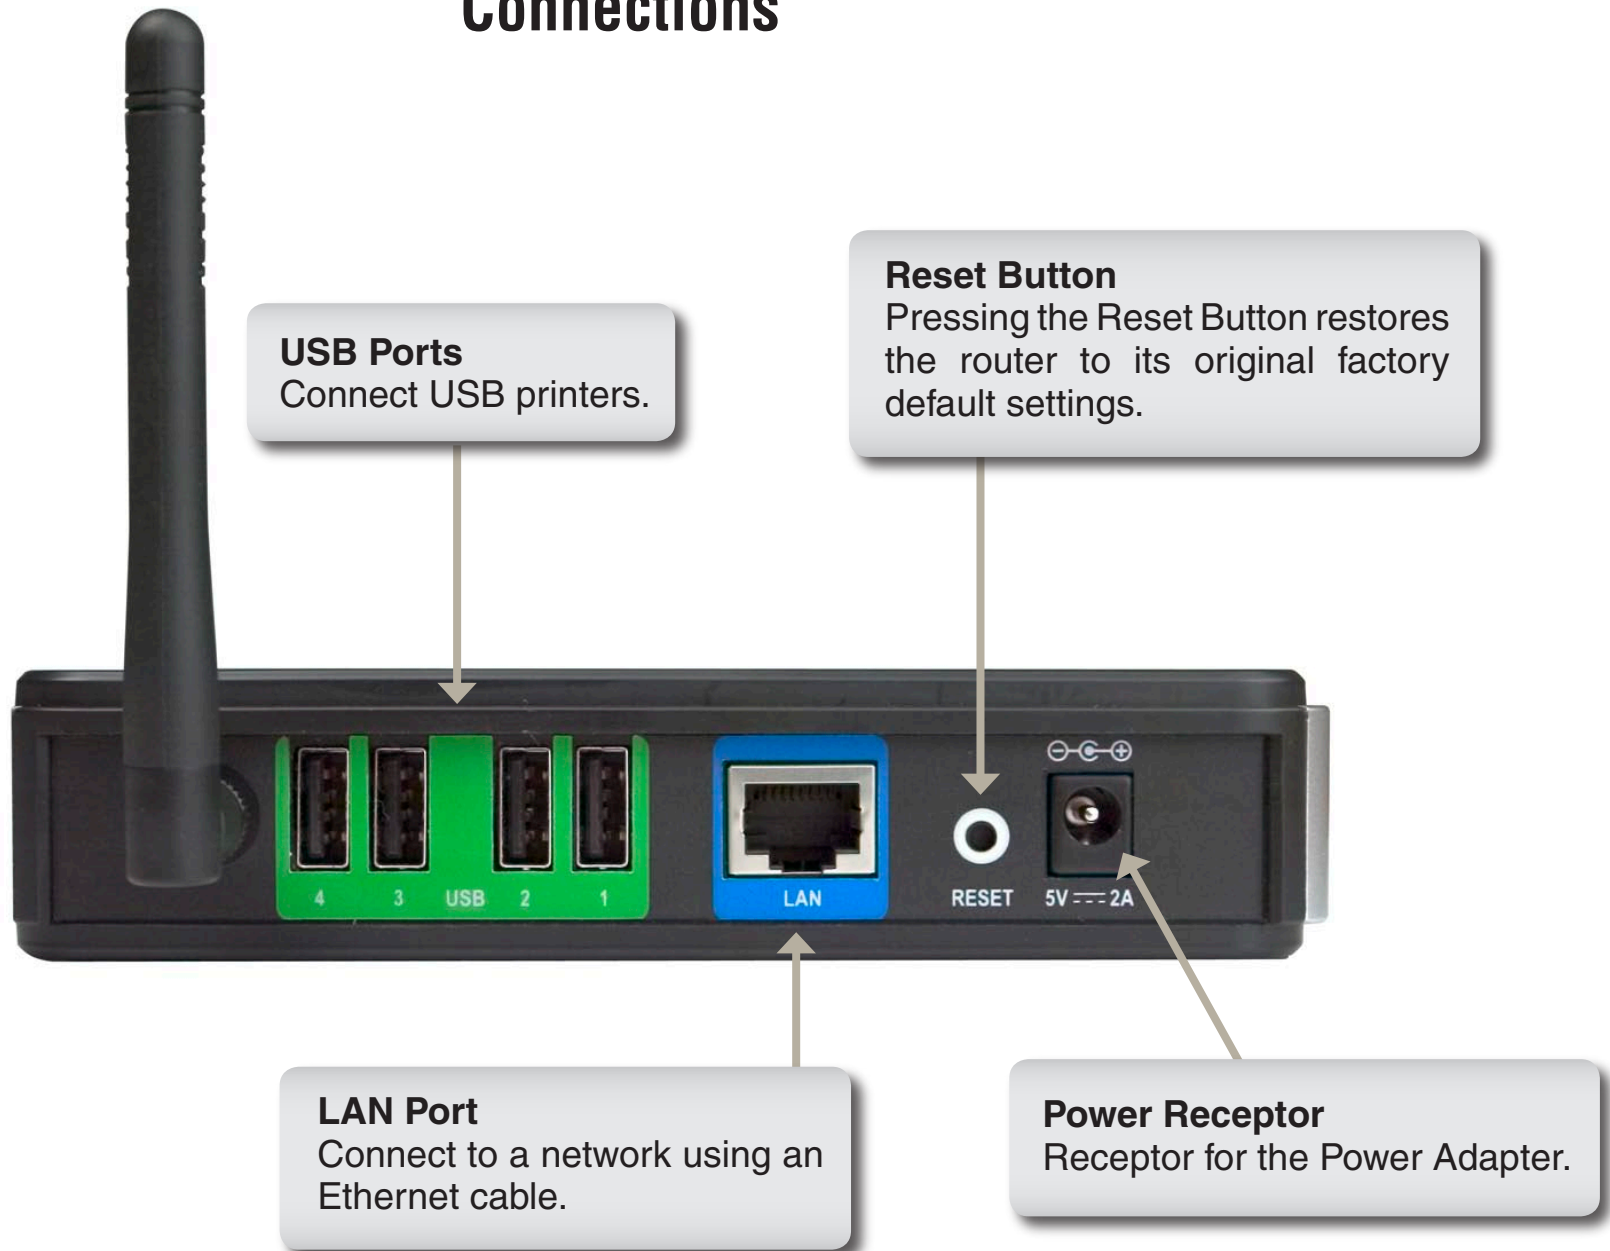

Hardware Overview


LEDs

WLAN LED

A solid light indicates that the wireless segment is ready. This LED blinks during wireless data transmission.

LAN LED

A solid light indicates connection on the LAN port. This LED blinks during data transmission.

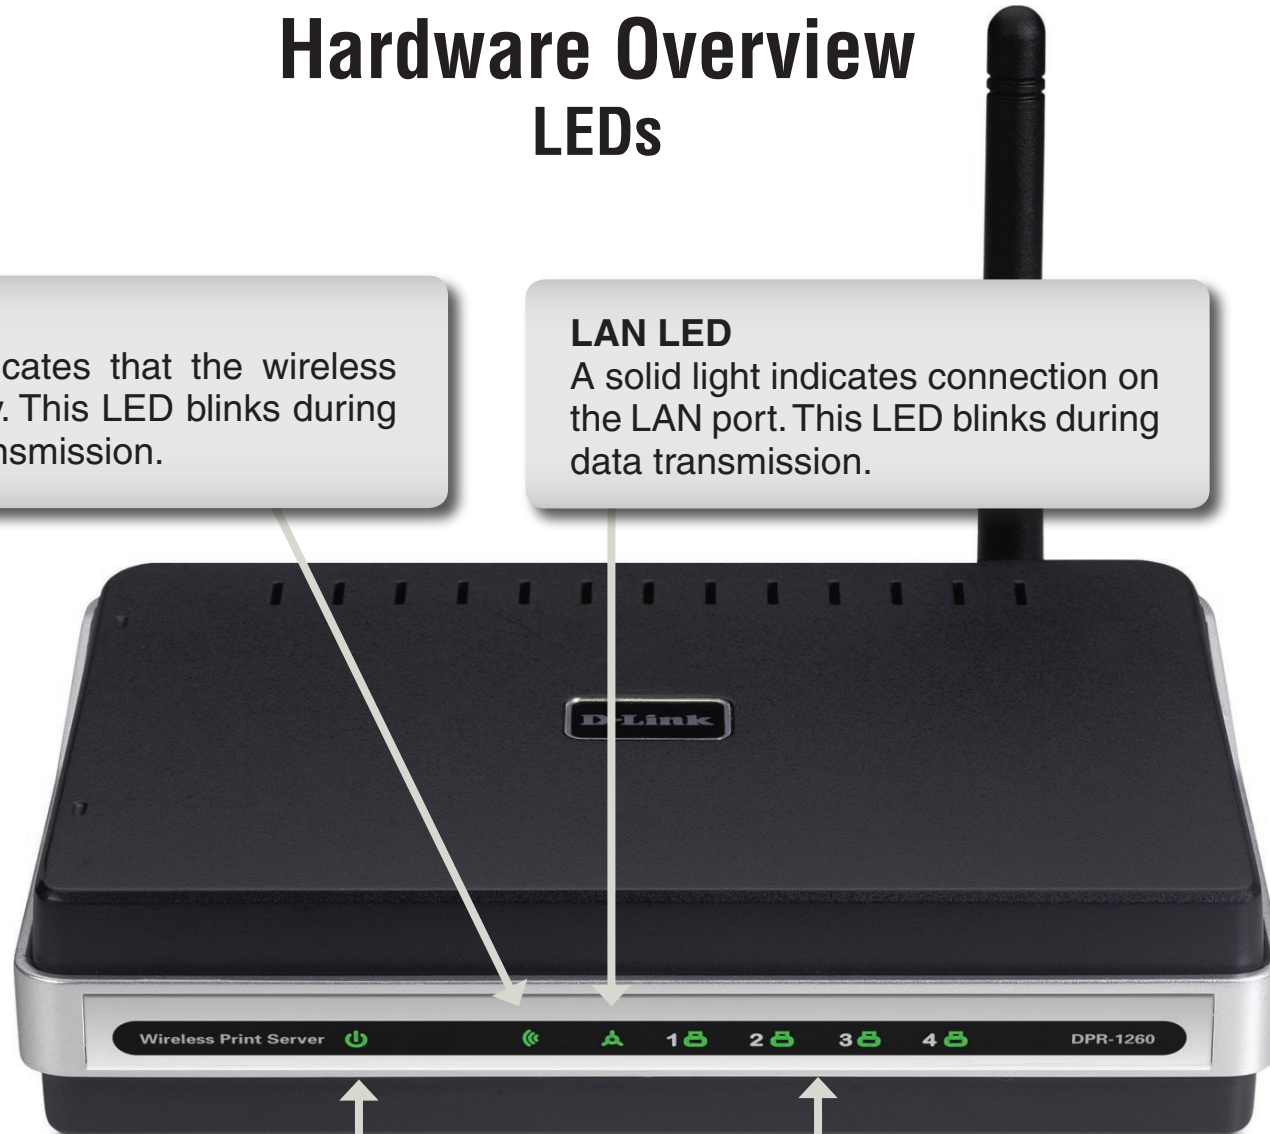

Power LED

A solid light indicates a proper connection to the power supply.

USB LEDs (1-4)

A solid light indicates connectivity to an USB printer or scanner.

Chapter 2 - Installation

This section will walk you through the installation process. Placement of the print server is very important. Do not place the print server in an enclosed area such as a closet or cabinet.

Setting up the DPR-1260

WARNING: *Configuration problems may result if the Print Server is powered up without first establishing its network connection. Follow this procedure to avoid complications at the configuration stage.*

1. Confirm proper operation of your printer before connecting the DPR-1260.
2. When you have confirmed proper operation of your USB printer, turn your printer power OFF.
3. Confirm that your network is operating normally.
4. Connect the DPR-1260 to your network, using a straight-through CAT5 cable. It is required that an Ethernet cable is used during initial setup. Once your wireless configuration is set, you may disconnect the Ethernet cable and begin communicating wirelessly with your DPR-1260.
5. While the printer is powered OFF, use the USB printer cable to connect the DPR-1260 to your USB printer.
6. Switch ON your USB printer.
7. Plug the DC power adapter into the DC 5V power socket on the rear panel of the Print Server.
8. Plug the power adapter into a power outlet. This will supply power to the DPR-1260, as it has no external power switch. The green Power LED on the Print Server's front panel should illuminate steadily, and the Print Server's Self-Test will proceed.

Wireless Installation Considerations


The D-Link wireless print server lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link print server and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.


UPnP Setup

UPnP (Universal Plug and Play) is only available on Windows® Me and XP. To enable UPnP or to check if you do have UPnP enabled, follow the steps below:


1. Click on **Start**, right-click on **My Computer**, and then click **Manage**.

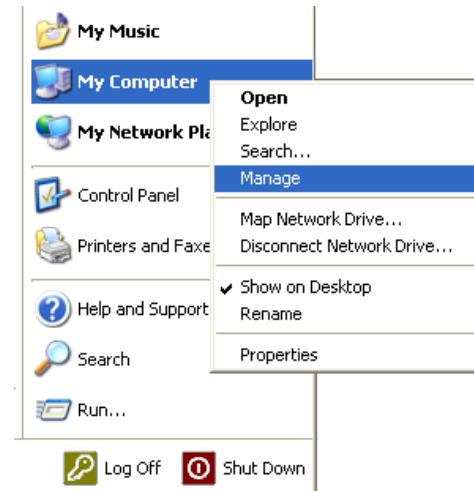

2. Double-click on **Services and Applications**.

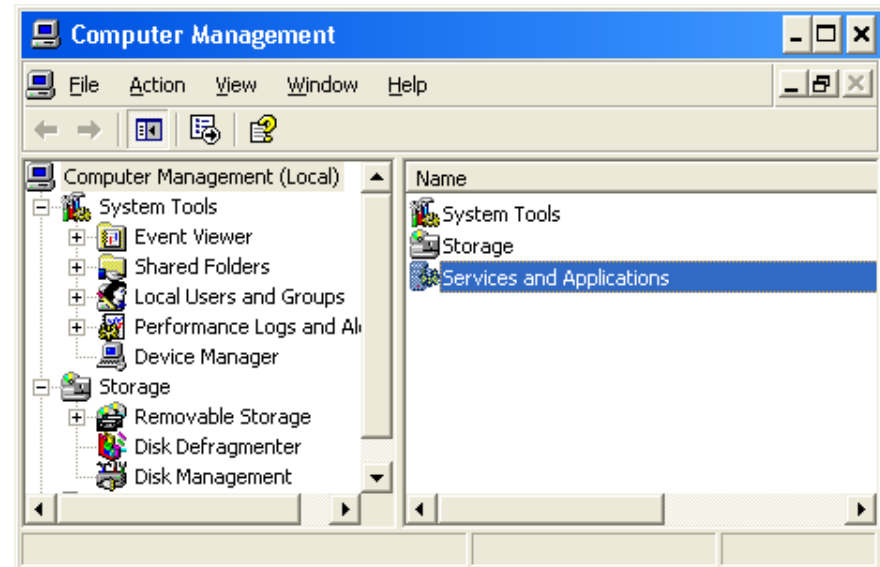


3. Double-click on **Services**.

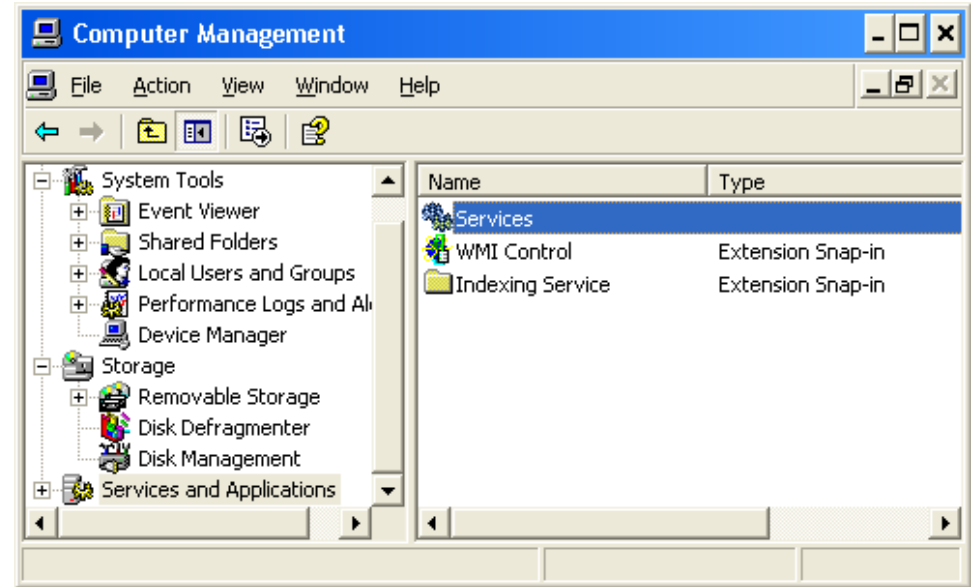


4. In the right pane, locate the service named **Universal Plug and Play Device Host**. Right-click the service and select **Properties**.

If the status is set to Started, UPnP is already installed and is running.


If the Universal Plug and Play service is not listed, skip to page 13 to install.

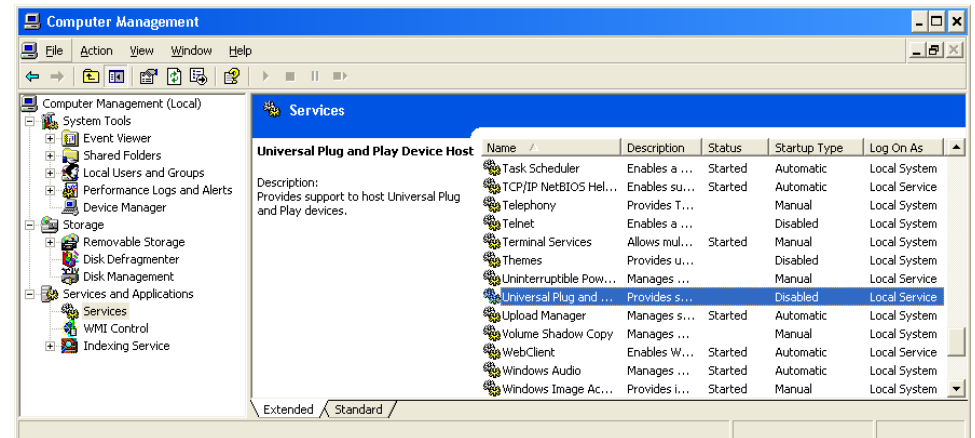

5. Make sure that the Startup type is set to **Automatic**.

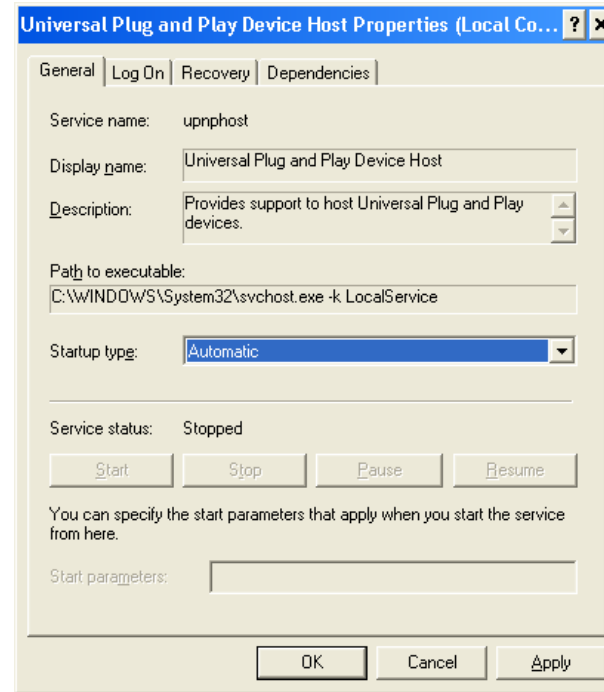

6. Click **Start** and then click on **OK** once the service has finished starting.

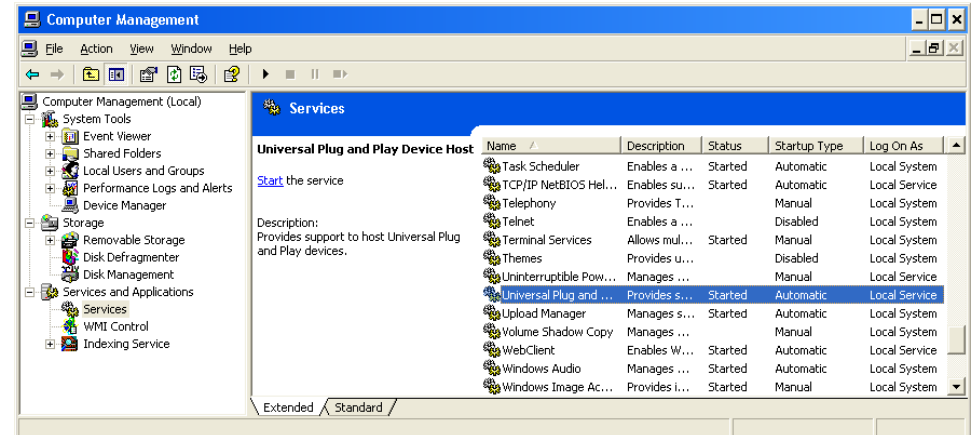


7. Locate the service named **SSDP Discovery Service**, right-click the service, and select **Properties**.

8. Repeat Steps 5 and 6 for the SSDP Discovery Service.


UPnP Installation

Follow the steps below to install UPnP on your Windows® XP machine. You may need your original Windows XP installation CD.

1. Click **Start** and then click **Control Panel**. Double-click **Add/Remove Programs**.
2. Click **Add/Remove Windows Components** on the left side. Please wait while the list of Windows Components loads.
3. Scroll down to **Networking Services**. Select **Network Services** and then click **Details**.

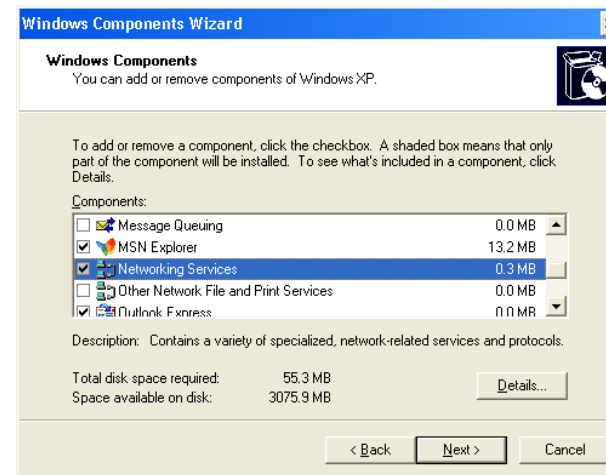

4. Check **Universal Plug and Play** and then click **OK**.

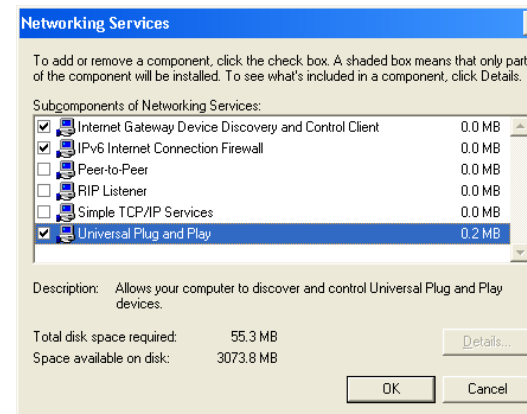

Chapter 3 - Configuration

This section will show you how to configure your new D-Link wireless print server using the web-based configuration utility.

Web-based Configuration Utility

The IP address of your print server will be automatically assigned by your router.

To access the print server's web-based configuration interface:

Windows® XP users:

Double-click on the **My Network Places** icon on your desktop. Your print server will be displayed as “DPR-1260:dlink-xxxxxx” (where xxxxxx is the last 6 characters of your print server's MAC address). If you do not see the print server or have UPnP enabled, please refer to page 13.

Windows® 2000 users:

You will need to write down the MAC address located on the bottom of the print server (E.G. 00-15-E9-F9-6B-BC).

Open a web browser and enter the following:

http://dlink-XXXXXX

XXXXXX = the last six characters of your MAC address.



Note: Some printer software features may not work while connected to the print server such as ink level display.

Status

The Status section displays helpful at-a-glance information about the print server and how it is currently configured. It also displays the printers attached to the print server. You may need to refresh the page to update the information.

Device Information

Identification: The print server name, IP address, MAC address, and firmware version are displayed here.

Server Name: The network name assigned to the print server.

IP Address: The print server's current IP address.

MAC Address: The print server's MAC address.

Firmware: The print server's current firmware version.

Attached Devices: Any attached printers and scanners will be displayed here.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP SUPPORT

DEVICE INFO

WIRELESS

WIRELESS NETWORKS

DEVICE INFO

Displays helpful at-a-glance information about the print server and how it is currently configured. It also displays the printers attached to the print server. You may need to refresh the page to update the information.

IDENTIFICATION

Server Name:	PS-7f0000
IP Address:	192.168.0.10 (static)
MAC Address:	0000047F0000
Firmware:	06012627

ATTACHED DEVICES

No Printers Detected.

Helpful Hints..

Identification:

Server Name - The network name assigned to the print server.

IP Address - The print server's current IP address.

MAC Address - The print server's MAC address.

Firmware - This is the print server's current firmware version.

Wireless Status

Wireless Status: **Radio Status:** Displays the status of the print server being associated or disconnected from an access point.

SSID: Displays the wireless network the print server is associated with.

Channel: Displays the channel that the print server and access point are currently using.

Transmit Rate: Displays the current connection rate that the print server is currently connected at.


Hardware Version: A1 Firmware Version: 1.00

DPR-1260	STATUS	SCAN	ADVANCED	SETUP	SUPPORT								
DEVICE INFO WIRELESS WIRELESS NETWORKS	WIRELESS Displays helpful at-a-glance information about the print server's wireless configuration. You may need to refresh the page to update the information.				Helpful Hints.. Wireless Status: Radio Status - Displays the status of the print server being associated or disconnected from an access point. SSID - Displays the wireless network the print server is associated with. Channel - Displays the channel that the print server and access point are currently using. Transmit Rate - Displays the current connection rate that the print server is currently connected at.								
	WIRELESS STATUS <table border="1"> <tbody> <tr> <td>Radio Status:</td> <td>Searching for AP</td> </tr> <tr> <td>SSID:</td> <td>TI</td> </tr> <tr> <td>Channel:</td> <td>n/a</td> </tr> <tr> <td>Transmit Rate:</td> <td>n/a</td> </tr> </tbody> </table>				Radio Status:	Searching for AP	SSID:	TI	Channel:	n/a	Transmit Rate:	n/a	
Radio Status:	Searching for AP												
SSID:	TI												
Channel:	n/a												
Transmit Rate:	n/a												

Wireless Networks

Wireless Networks Discovered: This screen will show all the wireless networks that the DPR-1260 detects. The MAC address, SSID, and channel will be displayed.

Hardware Version: A1 Firmware Version: 1.00

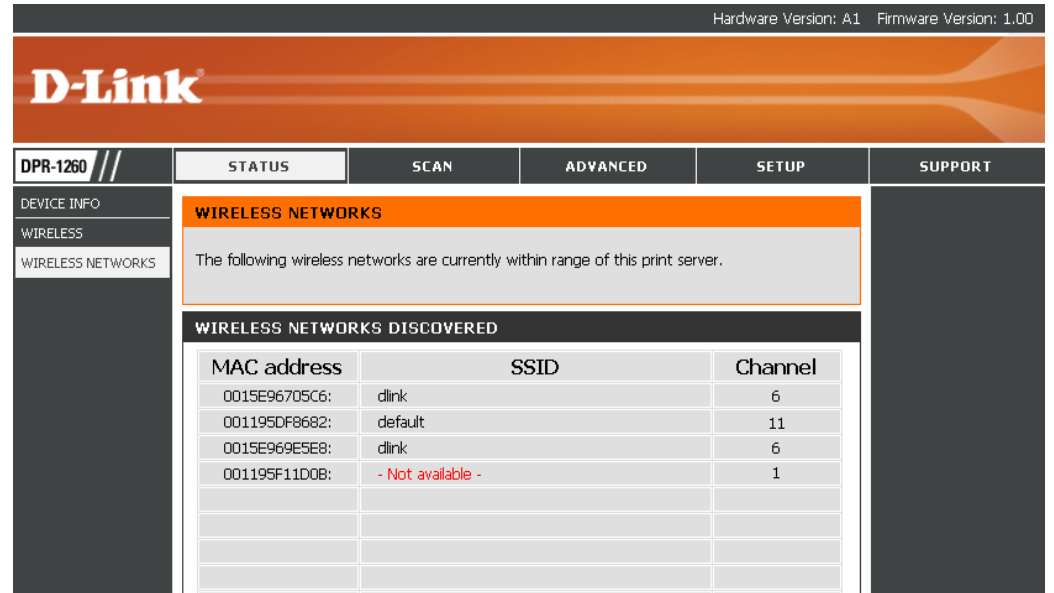

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP SUPPORT

DEVICE INFO
WIRELESS
WIRELESS NETWORKS

WIRELESS NETWORKS

The following wireless networks are currently within range of this print server.

WIRELESS NETWORKS DISCOVERED

MAC address	SSID	Channel
0015E96705C6:	dlink	6
001195DF8682:	default	11
0015E969E5E8:	dlink	6
001195F11D0B:	- Not available -	1

Scan

Scan Device: Select **Scanner Bed** (most common) or **Automatic Document Feeder (ADF)**. If you select ADF, select the document size from the drop-down menu.

Size: Select **Full Bed**, **Letter**, **Executive**, **A4**, or enter a custom size.

Offset: Enter an offset in inches or millimeters.

Resolution: Select the resolution from Low to Highest.

Color Copy: Select color or black & white.

File Format: Select JPEG or PDF format.

Scan Button: Click the **Scan** button to scan the document.

For more information regarding your scanner, please refer to the scanner's documentation.

Unfortunately not all scanners will operate or be detected when connected to the D-Link print server. Please visit <http://support.dlink.com> for an updated compatibility list.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP SUPPORT

① Select the location of the document to scan. Press *Preview Scan* to get a quick preview of the scanner bed contents. If you select *ADF*, also specify the document size.

Scan Device

No Scanner Detected

Scanner Bed Automatic Document Feeder (ADF)

 Document Size

② Click and drag on the scanner bed preview window to select the area you wish to scan. Make any adjustments to resolution, color, and file format. Then press *Scan*.

Scan Area	Resolution	Example Use
Size	<input type="radio"/> Highest	Enlarged or cropped photo print
<input checked="" type="radio"/> Full Bed <input type="radio"/> Letter <input type="radio"/> Executive <input type="radio"/> A4 <input type="radio"/> Custom	<input type="radio"/> High	Photo print or slide presentation
<input type="text" value="8.5x11.7"/> inches	<input type="radio"/> Medium	Web page image
	<input type="radio"/> Low	E-mail attachment

Offset inches

inches mm

Copy Color

Color

Black & White

File Format	Example Use
<input checked="" type="radio"/> JPEG	Scan bed or single-page ADF scan
<input type="radio"/> PDF	Multi-page ADF scan

Preview Window

WIRELESS

Advanced Settings

Printer

The following settings determine which printing protocols are enabled on the print server. The print server will listen for print jobs on the TCP ports associated with the enabled protocols.

To access this page, you will be prompted to enter your administrator password. If you have not set up a password, leave the password blank. Please refer to page 28 for setting up an administrator password.

Printing Protocols: Both protocols are enabled by default.

Raw TCP Port: Raw TCP Port is the most common print method. This protocol uses TCP ports 9100-9103. Enable the protocol to communicate with an attached printer using the print server name and the unique TCP port number assigned to the printer.

LPR/LPD: LPR/LPD is more commonly used in Mac or Unix environments. This protocol uses TCP port 515. Enable the protocol to communicate with an attached printer using the print server name and the unique queue name assigned to the printer.

The screenshot shows the D-Link DPR-1260 printer configuration interface. The top navigation bar includes tabs for STATUS, SCAN, ADVANCED (selected), SETUP, and HELP. The left sidebar lists PRINTING, WIRELESS, and SYSTEM. The main content area is titled 'ADVANCED PRINTING' and contains the following text: 'The following settings determine which printing protocols are enabled on the print server. The print server will listen for print jobs on the TCP ports associated with the enabled protocols.' Below this text is a 'PRINTING PROTOCOL' section with two rows of settings:

Protocol	Enable	Disable
Raw TCP Port	<input checked="" type="radio"/>	<input type="radio"/>
LPR/LPD	<input checked="" type="radio"/>	<input type="radio"/>

At the bottom of the settings section are 'Save' and 'Cancel' buttons. On the right side of the page, there is a 'Helpful Hints..' section with the following text:

Printing Protocol:
Both protocols are enabled by default.

Raw TCP Port is the most common print method. This protocol uses TCP ports 9100-9103. Enable the protocol to communicate with an attached printer using the print server name and the unique TCP port number assigned to the printer.

LPR/LPD is more commonly used in Mac or Unix environments. This protocol uses TCP port 515. Enable the protocol to communicate with an attached printer using the print server name and the unique queue name assigned to the printer.

Wireless

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings. To access this page, you will be prompted to enter your administrator password. If you have not set up a password, leave the password blank. Please refer to page 28 for setting up an administrator password.

Fragmentation Threshold: Transmitted wireless packets larger than this size will be fragmented to maintain performance in noisy wireless networks. The valid range is 256-65535. Values larger than about 1560 will prevent fragmentation from taking place.

RTS Threshold: Transmitted wireless packets larger than this size will use the RTS/CTS protocol to (a) maintain performance in noisy wireless networks and (b) prevent hidden nodes from degrading performance. The valid range is 1-65535. Values larger than about 1560 will prevent RTS/CTS from taking place.

Burst Time: Set the time duration here for transmission burst mode, in microseconds. The valid range is 0-65535 with 0 to disable bursting. Burst mode can increase data throughput by occupying the channel for an extended duration. Typical values are in the range of several milliseconds (ie. 3000).

Beacon Period: In adhoc mode beacons are sent out periodically. This is the number of milliseconds between each beacon. The valid range is 1 - 65535.

DPR-1260	STATUS	SCAN	ADVANCED	SETUP	HELP
PRINTING	ADVANCED WIRELESS				Helpful Hints..
WIRELESS	If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.				Wireless Settings:
SYSTEM	WIRELESS SETTINGS				Fragmentation Threshold - Transmitted wireless packets larger than this size will be fragmented to maintain performance in noisy wireless networks. The valid range is 256..65535. Values larger than about 1560 will prevent fragmentation from taking place.
	Fragmentation threshold	<input type="text" value="2346"/>	(256..65535)		RTS threshold - Transmitted wireless packets larger than this size will use the RTS/CTS protocol to (a) maintain performance in noisy wireless networks and (b) prevent hidden nodes from degrading performance.
	RTS threshold	<input type="text" value="2346"/>	(1..65535)		
	Burst time	<input type="text" value="0"/>	(0..65535)		
	Beacon period	<input type="text" value="100"/>	(1..65535)		
		<input type="button" value="Save"/> <input type="button" value="Cancel"/>			

System

The Systems page will allow you to enable or disable UPnP™ (Universal Plug n Play). To access this page, you will be prompted to enter your administrator password. If you have not set up a password, leave the password blank. Please refer to page 28 for setting up an administrator password.

UPnP: (Universal Plug and Play) When enabled, the print server can be discovered on the network from UPnP-enabled computers.

Windows® 2000 does not support UPnP. If you are using all Windows® 2000 computers on your network, disable this feature.

The screenshot shows the D-Link web interface for the DPR-1260 print server. The top navigation bar includes tabs for STATUS, SCAN, ADVANCED (selected), SETUP, and HELP. The left sidebar has links for PRINTING, WIRELESS, and SYSTEM. The main content area is titled 'ADVANCED SYSTEM' and contains the following text: 'The following settings determine which system features are enabled on the print server. The print server will respond to requests associated to enabled protocols.' Below this, under the heading 'SYSTEM FEATURES', the 'UPnP' option is shown with the 'Enable' radio button selected. 'Save' and 'Cancel' buttons are located at the bottom right of the settings area. A 'Helpful Hints..' section on the right provides additional information: 'System Features: UPnP is short for Universal Plug and Play. The Print Server can be discovered on the network via UPnP enabled computers.'

Setup



Setup Wizard

Note: If you are installing the print server for the first time, please follow the steps in the installation guide. If you do not have the installation guide, please configure the wireless settings before running this wizard. Skip to pages 25-26 and then come back and run the wizard.

You may run the setup wizard to quickly setup your print server. Click **Next** to launch the wizard.

You will need to run this wizard from each computer that wishes to use the printer.

If you receive the following error, make sure your printer is properly connected to the print server and that the printer is powered on.

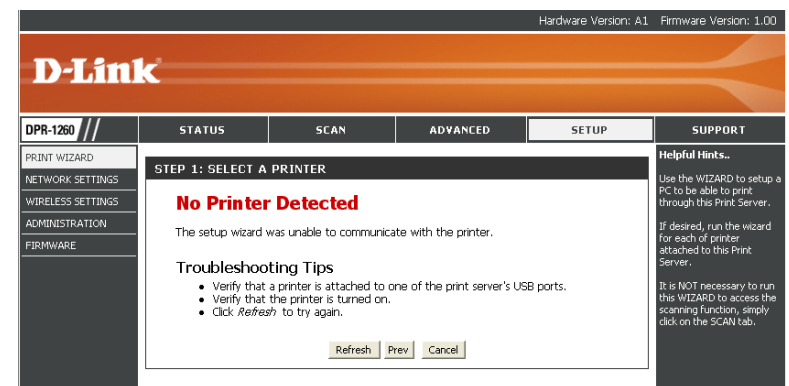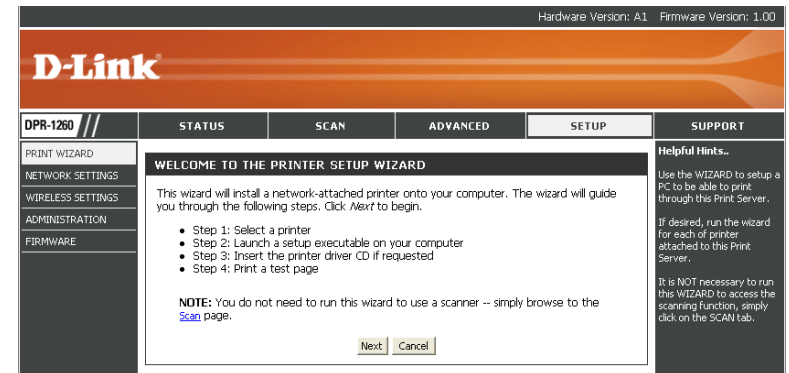

Click the radio button next to the printer you want to configure. Click **Next** to continue.

The screenshot shows the D-Link DPR-1260 web interface. At the top right, it displays "Hardware Version: A1" and "Firmware Version: 1.00". The D-Link logo is prominently featured. Below the logo is a navigation menu with tabs for "DPR-1260", "STATUS", "SCAN", "ADVANCED", "SETUP", and "SUPPORT". The "SETUP" tab is selected. On the left side, there is a vertical menu with options: "PRINT WIZARD", "NETWORK SETTINGS", "WIRELESS SETTINGS", "ADMINISTRATION", and "FIRMWARE". The "PRINT WIZARD" option is highlighted. The main content area is titled "STEP 1: SELECT A PRINTER". It contains the following text: "The following printers have been detected. Select the printer you wish to install onto your computer, then click *Next*." Below this text are four radio button options:


- USB Port 1**
Manufacturer : EPSON
Model : Stylus Photo 925
- USB Port 2**
No Printer Detected
- USB Port 3**
No Printer Detected
- USB Port 4**
No Printer Detected

 A note at the bottom of the main area states: "NOTE: If the printer you wish to use is attached to the Ethernet port of the print server, exit this wizard and run the installation software that came with that printer." At the bottom of the main area are four buttons: "Refresh", "Prev", "Next", and "Cancel". On the right side, under "Helpful Hints..", there is text: "Use the WIZARD to setup a PC to be able to print through this Print Server. If desired, run the wizard for each of printer attached to this Print Server. It is NOT necessary to run this WIZARD to access the scanning function, simply click on the SCAN tab."

Click **Next** to continue.

The screenshot shows the D-Link DPR-1260 web interface at the next step. The top right corner shows "Hardware Version: A1" and "Firmware Version: 1.00". The D-Link logo is present. The navigation menu is the same, with "SETUP" selected. The left-side menu is also the same, with "PRINT WIZARD" highlighted. The main content area is titled "STEP 2: LAUNCH THE SETUP EXECUTABLE ON YOUR COMPUTER". It contains the following text: "When the File Download dialog appears, click *Run*." Below this is a paragraph: "After clicking *Next*, you will be asked for permission to download an executable file. Please click *Run/Open* to allow the executable to run on your computer. If a second window appears prompting you to verify the publisher, please click *Run* again." At the bottom of the main area are three buttons: "Prev", "Next", and "Cancel". On the right side, the "Helpful Hints.." section is identical to the previous screenshot.


Click **Open** (or Run) to load the printer drivers to your computer.

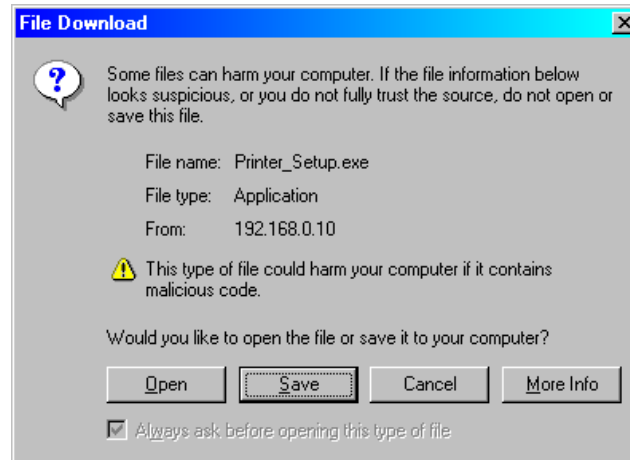

You may need to insert your printer driver CD to load the drivers to your computer.

If the autorun screen appears when inserting your printer driver CD, click cancel or close.

Click **Finish** to complete the setup wizard.

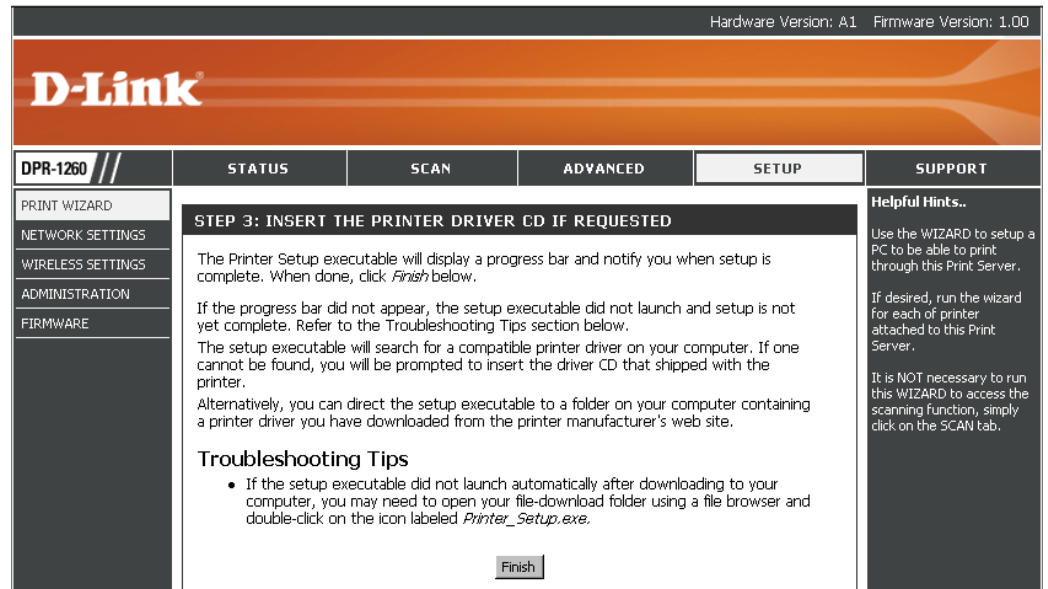

Network Settings

These are the network settings of your print server. By default, the print server is set to **DHCP**. The IP address of your print server will be automatically assigned by your router or DHCP server. If you are using Windows® 2000 or not using UPnP on your computers, you must set a Static IP address.

Network Settings: Select **DHCP** to get the IP settings automatically from a router or DHCP server on your network. Select **Static** to assign an IP address to the print server.

IP Address: Type the desired IP address of the print server.

Subnet Mask: Enter the subnet mask of your network.

Default Gateway: Enter the default gateway. This is usually the IP address of your router or gateway.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED **SETUP** SUPPORT

PRINT WIZARD
 NETWORK SETTINGS
 WIRELESS SETTINGS
 ADMINISTRATION
 FIRMWARE

NETWORK SETUP

These are the settings of the LAN (Local Area Network) interface for the device. These settings may be referred to as "private settings". You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet. The default IP address is 192.168.0.10 with a subnet mask of 255.255.255.0.

NETWORK SETTINGS

IP address mode DHCP Static

IP address

Subnet mask

Default gateway

Helpful Hints..

Network Settings:

IP address mode - Select "DHCP" to get the IP settings automatically from a DHCP server on your network. Select "Static" to use the IP settings specified below.

IP address - Type the desired "Static" IP address of the print server.

Subnet mask - The subnet mask specifies the network number portion of an IP address.

Default gateway - This is the IP address of the gateway that connects the network to the internet.

Wireless Settings

Wireless on/off: Check the **Yes** box to enable the wireless function. If you do not want to use wireless, check the **No** box to disable all the wireless functions.

Wireless Network Name: Service Set Identifier (SSID) is the name of your wireless network. Select your network from the drop-down menu or select **Enter Manually** and type in your SSID.

Wireless Mode: Select Infrastructure if you want your print server to connect to an access point or wireless router. Select Ad-Hoc if you are connecting directly to a wireless client such as a computer with a wireless adapter.

Security Mode: Select None to use connect to an unsecure network, WEP, or WPA.

Please refer to Chapter 4 for more information regarding wireless security and setup instructions.

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP HELP

WIRELESS SETUP

From this page you can configure the print server to wirelessly connect to your LAN via an 802.11 (Wi-Fi) access point or router.

WIRELESS SETTINGS

Wireless On/Off ON OFF

Wireless Network Name (SSID) Enter Manually

Wireless Mode Infrastructure Ad-hoc

Security Mode None WEP WPA

Save Cancel

Helpful Hints..

Wireless On/Off - Enable/Disable the wireless radio.

Wireless Network Name (SSID) - Specify the name of the wireless access point that the print server should connect to.

Wireless Mode - Select *Infrastructure* to connect to a LAN via a wireless Access Point (AP). Select *Ad-hoc* to connect directly to a Wi-Fi enabled workstation/laptop.

Security Mode - Select the security protocol used to encrypt data transmitted over the wireless connection. WPA is more secure than WEP, but not

Ad-Hoc Settings

Transmission Rate: Select the transfer rate based on the speed of your wireless network. It is strongly recommended to keep this setting to **Auto**.

Super G Mode: Super G is a group of performance enhancement features that increase end user application throughput in an 802.11g network. Super G is backwards compatible to standard 802.11g devices. For top performance, all wireless devices on the network should be Super G capable. Select either Disabled, Super G without Turbo, Super G with Dynamic Turbo.

- Disabled - Standard 802.11g support, no enhanced capabilities.
- Super G without Turbo - Capable of Packet Bursting, FastFrames, Compression, but no Turbo mode.
- Super G with Dynamic Turbo - Capable of Packet Bursting, FastFrames, Compression, and Dynamic Turbo. This setting is backwards compatible with non-Turbo (legacy) devices. Dynamic Turbo mode is only enabled when all devices on the wireless network are Super G with Dynamic Turbo enabled.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED **SETUP** SUPPORT

WIRELESS SETUP

From this page you can configure the print server to wirelessly connect to your LAN via an 802.11 (Wi-Fi) access point or router.

WIRELESS SETTINGS

Wireless On/Off ON OFF

Wireless Network Name (SSID)

Wireless Mode Infrastructure Ad-hoc

Transmission rate (Mbits/s)

802.11 Mode

Super mode

Channel

Security Mode None WEP WPA

Helpful Hints..

Wireless Settings:

Wireless On/Off - Enable/Disable the wireless radio.

Wireless Network Name (SSID) - Specify the name of the wireless access point that the print server should connect to.

Wireless Mode - Select *Infrastructure* to connect to a LAN via a wireless Access Point (AP). Select *Ad-hoc* to connect directly to a Wi-Fi enabled workstation/laptop.

Transmission rate (Mbits/s) - This is the speed at which the station will transmit data. Normally you should select 'best' here, although if your wireless network is unusually noisy or quiet you may wish to use a fixed low or high rate. Note that the actual TX rate is doubled for turbo mode (values in brackets).

Wireless Channel: Indicates the channel setting for the DPR-1260. By default the channel is set to 6. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. The **Auto Channel Scan** setting can be selected to allow the DPR-1260 to choose the channel with the least amount of interference.

802.11g Only Mode: Enable this mode if your network is made up of purely 802.11g devices. If you have both 802.11b and 802.11g wireless clients, uncheck the box.

Security Mode: See Chapter 4 for security settings.

Administration Settings

Administrator Password: Enter a new admin password and click **Save** to apply the settings.

Reboot: Click **Reboot** to restart the print server.

Reset Configuration: Click the **Reset Configuration** button to reset the print server back to the default settings.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED **SETUP** SUPPORT

PRINT WIZARD
NETWORK SETTINGS
WIRELESS SETTINGS
ADMINISTRATION
FIRMWARE

ADMINISTRATION

From this page you can set the print server's password, reboot, or restore to defaults.

SECURITY

Administrator password

This is the password that you must type when logging in to these web pages. For confirmation, you must enter the same password into both boxes.

Save Cancel

ADMINISTRATION

Clicking the button below will immediately reboot the print server. A reboot is required before any configuration changes you have made will take affect.

Reboot

Clicking the button below will reset all configuration options to their factory default values and reboot the device. Note that the IP address of the device will also be reset and it may be necessary to change the address in your browser to access this website again.

Reset Configuration

Update Firmware


You can upgrade the firmware of the print server here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on **Browse** to locate the firmware file to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

Upgrade Firmware: Visit <http://support.dlink.com> to download the latest firmware for the DPR-1260.

Browse: After you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive.

Upgrade: Click Upgrade to start the upgrade process. Allow up to 1 minute for the upgrade process.

Caution: Do not turn off the power to the print server during this process.

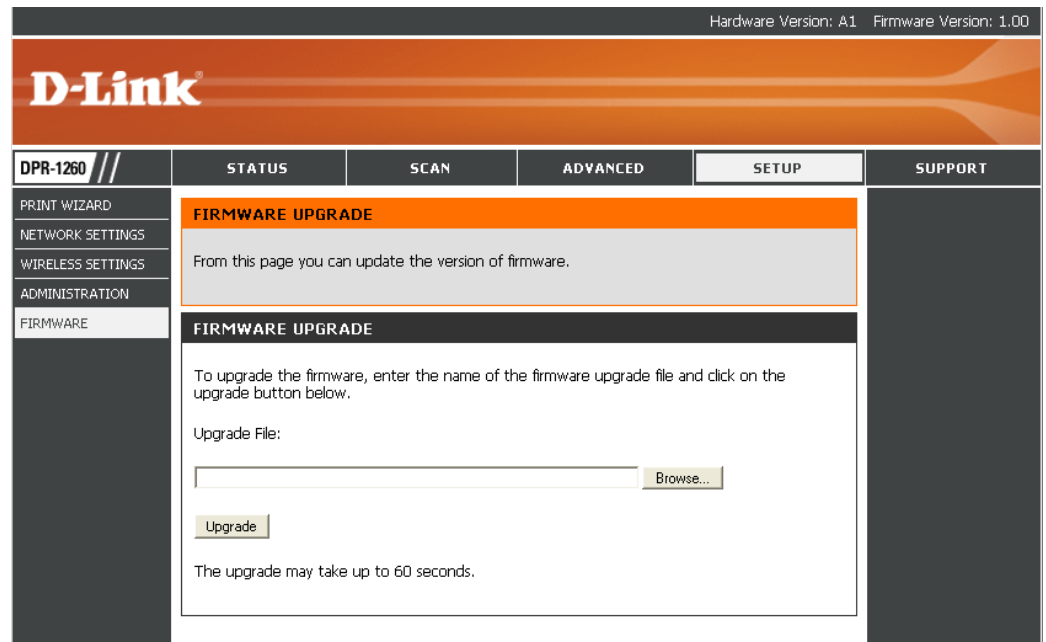

The screenshot shows the D-Link web interface for the DPR-1260. At the top right, it displays "Hardware Version: A1" and "Firmware Version: 1.00". The D-Link logo is prominently featured in the header. Below the logo is a navigation menu with tabs for "DPR-1260", "STATUS", "SCAN", "ADVANCED", "SETUP", and "SUPPORT". The "SETUP" tab is selected. On the left side, there is a vertical menu with options: "PRINT WIZARD", "NETWORK SETTINGS", "WIRELESS SETTINGS", "ADMINISTRATION", and "FIRMWARE". The "FIRMWARE" option is selected. The main content area is titled "FIRMWARE UPGRADE" and contains the following text: "From this page you can update the version of firmware." Below this, there is a sub-section also titled "FIRMWARE UPGRADE" with instructions: "To upgrade the firmware, enter the name of the firmware upgrade file and click on the upgrade button below." This section includes a text input field for the "Upgrade File:" name, a "Browse..." button, and an "Upgrade" button. A note at the bottom states, "The upgrade may take up to 60 seconds."

Support Menu

D-Link					
DPR-1260	STATUS	SCAN	ADVANCED	SETUP	HELP
MENU	HELP MENU				
SUPPORTED DEVICES	<ul style="list-style-type: none"> • Status • Scan • Advanced • Setup • Glossary <p>For more help and information, please visit support.dlink.com</p>				
GLOSSARY	STATUS HELP				
	Status-Device Info Server name: This is the default print server name. IP address: This is the current IP address of your print server. An IP address is a unique 32-bit number -- when talking about Internet Protocol Version 4 -- that identifies each computer that transmits data on the Internet or on an Intranet. MAC address: This is the factory MAC address. A MAC address is a unique hardware ID assigned to every network device by the manufacturer. Firmware: This is the current firmware version that is running on the print server. USB Port 1-4: These are the status of the four USB 2.0 ports. If you have a printer(s) connected to a port, the LED on the front panel will illuminate. The status will also show you the model number of the printer. Printer Status: This displays whether your printer is operating correctly with the print server. Scanner: This shows you if the print server detects a scanner.				

Supported Devices

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP SUPPORT

CONTACT US
SUPPORTED DEVICES

SUPPORTED DEVICES

Hewlett Packard Printers
 DeskJet 3520, 3550, 3650
 DeskJet 5150
 DeskJet 5650, 5850
 InkJet 12000, 11000TN
 LaserJet 1012, 1022n, 1150, 1160, 1300, 1315, 1320
 LaserJet 3015, 3020, 3030
 OfficeJet 4110, 4215
 OfficeJet 5505, 5510
 OfficeJet 6110, 6122, 6127
 OfficeJet 6210xi
 OfficeJet 7110, 7130
 OfficeJet 7210
 PhotoSmart 145, 245, 325, 375
 PhotoSmart 7260
 PhotoSmart 7660, 7755, 7760, 7960
 PSC 1210
 PSC 1350
 PSC 1410, 1510
 PSC 1600, 1610
 PSC 2175
 PSC 2410, 2510, 2350, 2355

Canon Printers
 CP-200, CP-330
 i350
 i455, i475D
 i560
 i70
 i80
 i860
 i900D, i960
 MP360, MP390
 MP730

Epson Printers
 Stylus 1280
 Stylus C44, C64, C84
 Stylus C66, C86
 Stylus CX5400, CX6400
 Stylus RX500, RX600
 Stylus R200, R300, R300M, R320
 Stylus R800
 Stylus 800, 810, 820, 825, 830, 830U, 850, 860
 Stylus 875dc, 875dcs, 870, 880, 890
 Stylus 900, 925, 960

Brother Printers
 DCP 1000, DCP 1400
 HL-1435, HL-1440
 HL-5040, HL-5140, 51500

Samsung Printers
 ML-1710, ML-1740

Helpful Hints...
Printers:
 Newer printers from supported manufacturers may be compatible. Use the Wizard to see if the new printer can be installed and used.

Glossary

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP HELP

MENU
SUPPORTED DEVICES
GLOSSARY

HELP GLOSSARY

A	B	C	D	E	F	G
H	I	J	K	L	M	N
O	P	Q	R	S	T	U
V	W	X	Y	Z	#	1

A

Access Control List
 ACL. This is a database of network devices that are allowed to access resources on the network.

Access Point
 AP. Device that allows wireless clients to connect to it and access the network

ActiveX
 A Microsoft specification for the interaction of software components.

Ad-hoc network
 Peer-to-Peer network between wireless clients

Address Resolution Protocol
 ARP. Used to map MAC addresses to IP addresses so that conversions can be made in both directions.

ADSL
 Asymmetric Digital Subscriber Line

Advanced Encryption Standard
 AES. Government encryption standard

Alphanumeric
 Characters A-Z and 0-9

Helpful Hints...
Printers:
 Newer printers from supported manufacturers may be compatible. Use the Wizard to see if the new printer can be installed and used.

Chapter 4 - Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The DPR-1260 offers the following types of security:

- WPA-PSK (Wi-Fi Protected Access - Pre-Shared Key)
- WEP (Wired Equivalent Privacy)

What is WEP?

WEP stands for *Wired Equivalent Privacy*. It is based on the IEEE 802.11 standard and uses the RC4 encryption algorithm. WEP provides security by encrypting data over your wireless network so that it is protected as it is transmitted from one wireless device to another.

To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.

What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

Configure WEP

It is recommended to enable encryption on your wireless router before your wireless print server. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the print server (192.168.0.10). Click on **Setup** and then **Wireless Settings** on the left side.
2. Next to *Security Mode*, select **WEP**.
3. Next to *Authentication*, select **Shared Key**.
4. Select either **64-bit** or **128-bit** encryption from the drop-down menu next to *WEP Encryption*.
5. Next to *Key 1*, enter a WEP key that you create. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys.
6. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the router.

Hardware Version: A1 Firmware Version: 1.00

D-Link

DPR-1260 // STATUS SCAN ADVANCED SETUP SUPPORT

PRINT WIZARD
NETWORK SETTINGS
WIRELESS SETTINGS
ADMINISTRATION
FIRMWARE

WIRELESS SETUP

From this page you can configure the print server to wirelessly connect to your LAN via an 802.11 (Wi-Fi) access point or router.

WIRELESS SETTINGS

Wireless On/Off ON OFF

Wireless Network Name (SSID)

Wireless Mode Infrastructure Ad-hoc

Security Mode None WEP WPA

Authentication

Default Key

Key Length ▾

WEP Key 1

WEP Key 2

WEP Key 3

WEP Key 4

Helpful Hints...

Wireless Settings:

Wireless On/Off - Enable/Disable the wireless radio.

Wireless Network Name (SSID) - Specify the name of the wireless access point that the print server should connect to.

Wireless Mode - Select *Infrastructure* to connect to a LAN via a wireless Access Point (AP). Select *Ad-hoc* to connect directly to a Wi-Fi enabled workstation/laptop.

Authentication - Select the type of authentication used when establishing a wireless connection.

Default Key - Select the default WEP key. The default key is used to encrypt outgoing data transmissions. The other keys are used to decrypt received data.

Key Length - Select the WEP key size. This length applies to all keys. Larger keys are more secure.

Configure WPA-PSK

It is recommended to enable encryption on your wireless router before your wireless print server. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Wireless Settings** on the left side.

2. Next to *Security Mode*, select **Enable WPA-Personal Security** or **Enable WPA2-Personal Security**.

3. Next to *Cipher Mode*, select **TKIP, AES, or Auto**.

4. Next to *PSK/EAP*, select **PSK**.

5. Next to *Passphrase*, enter a key (passphrase). The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. Make sure you enter this key exactly the same on all other wireless clients.

6. Enter the passphrase again next to *Confirmed Passphrase*.

7. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA-PSK (or WPA2-PSK) on your adapter and enter the same passphrase as you did on the router.

The screenshot shows the D-Link DPR-1260 web-based configuration interface. At the top, it displays 'Hardware Version: A1' and 'Firmware Version: 1.00'. The D-Link logo is prominently featured. Below the logo, there are navigation tabs: 'DPR-1260 //', 'STATUS', 'SCAN', 'ADVANCED', 'SETUP', and 'SUPPORT'. The 'SETUP' tab is selected, and the 'WIRELESS SETUP' page is displayed. The page contains a 'WIRELESS SETTINGS' section with the following fields and options:

- Wireless On/Off: ON OFF
- Wireless Network Name (SSID):
- Wireless Mode: Infrastructure Ad-hoc
- Security Mode: None WEP WPA
- Cipher Type:
- PSK:

At the bottom of the settings section are 'Save' and 'Cancel' buttons. On the right side of the interface, there is a 'Helpful Hints...' section with the following information:

- Wireless Settings:**
 - Wireless On/Off - Enable/Disable the wireless radio.
 - Wireless Network Name (SSID) - Specify the name of the wireless access point that the print server should connect to.
 - Wireless Mode - Select *Infrastructure* to connect to a LAN via a wireless Access Point (AP). Select *Ad-hoc* to connect directly to a Wi-Fi enabled workstation/laptop.
 - Cipher Type - Select the cipher type.
 - PSK - Enter a text passphrase between 8 and 63 characters.

Chapter 5 - Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DPR-1260. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link print server (192.168.0.10 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Internet Explorer 6.0 or higher
 - Netscape 8 or higher
 - Mozilla 1.7.12 (5.0) or higher
 - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
 - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your print server. Unfortunately this process will change all your settings back to the factory defaults.


To reset the print server, locate the reset button (hole) on the rear panel of the unit. With the print server powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the print server will go through its reboot process. Wait about 30 seconds to access the print server. The default IP address is 192.168.0.10. When logging in to the print server, leave the password blank (default setting).

3. I have Windows® 2000 and do not know the IP address of the print server. How can I access the web-based configuration utility?

Unfortunately Windows® 2000 does not support UPnP and the print server does not have a default IP address. You must connect the print server to a network with a DHCP server or a router/gateway that has DHCP enabled. You can obtain the IP address of the print server by accessing the DHCP log in your router or server.

Most D-Link routers will have a similar DHCP log page.

1. With the power off, connect the print server to your network using an Ethernet cable. Connect the power adapter to the print server. On the bottom of the print server, write down the 12-character MAC address (E.G. 00-34-A5-6B-FF-23).
2. From a computer, open a web browser such as Internet Explorer and enter the IP address of your router (E.G. 192.168.0.1). Enter your username and password.
3. For most D-Link routers, click on the **Home** tab and then click **DHCP** on the left. The DHCP table will be listed at the bottom. If you have a DIR-series router, go to **Setup > Network Settings** and scroll to the bottom.
4. Find the MAC address in the list that matches the MAC address of the print server. The IP address will be listed.

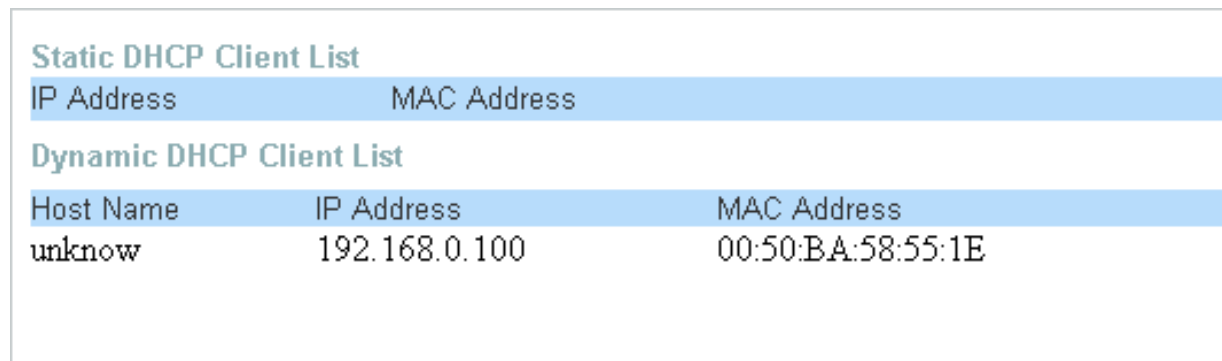

The screenshot shows a web-based DHCP log page. It is divided into two sections: 'Static DHCP Client List' and 'Dynamic DHCP Client List'. The 'Static DHCP Client List' section has a header with 'IP Address' and 'MAC Address'. The 'Dynamic DHCP Client List' section has a header with 'Host Name', 'IP Address', and 'MAC Address'. Below the dynamic header, there is one entry with 'Host Name' as 'unknow', 'IP Address' as '192.168.0.100', and 'MAC Address' as '00:50:BA:58:55:1E'.

Static DHCP Client List		
IP Address	MAC Address	
Dynamic DHCP Client List		
Host Name	IP Address	MAC Address
unknow	192.168.0.100	00:50:BA:58:55:1E

5. Now you may access the web-based configuration utility of the print server. Just enter the IP address into your web browser.

Appendix A - Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

How does wireless work?

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home

- Gives everyone at home broadband access
- Surf the web, check email, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like: Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or Access Point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more DPR-1260 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

Appendix B - Networking Basics

Check your IP address


By default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type *cmd* and click **OK**.

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

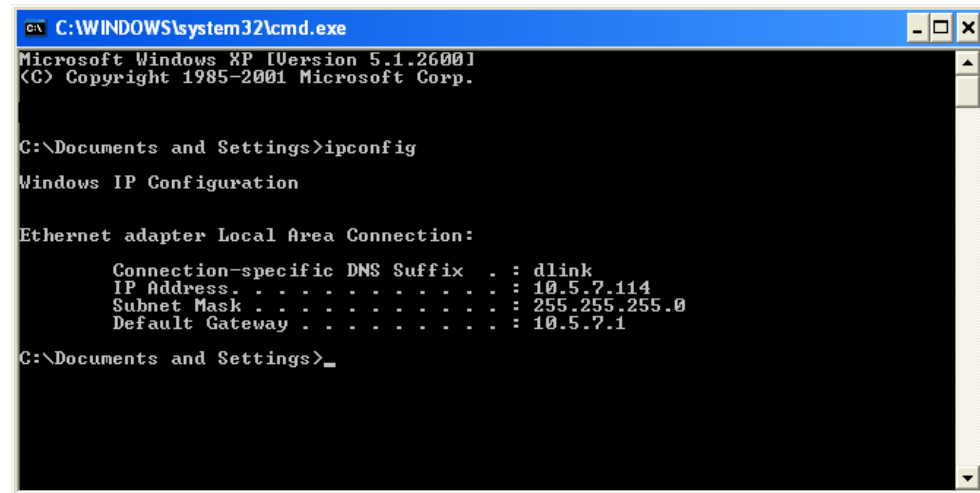

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

If you are connecting to a wireless network at a hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

Step 1

Windows® XP - Click on **Start > Control Panel > Network Connections**.

Windows® 2000 - From the desktop, right-click **My Network Places > Properties**.

Step 2

Right-click on the **Local Area Connection** which represents your D-Link network adapter and select **Properties**.

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click OK twice to save your settings.

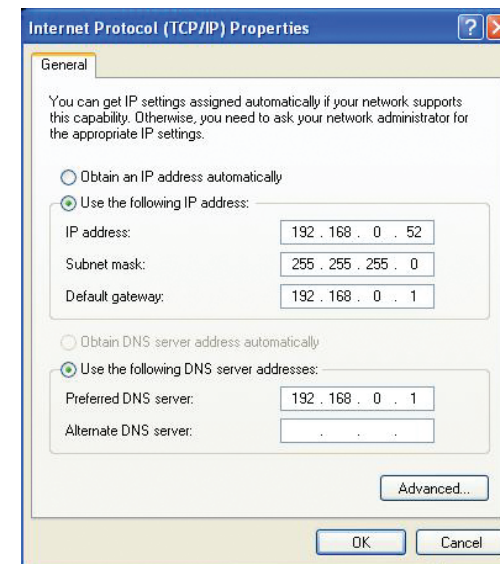

Appendix C - Technical Specifications

Standards

- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.3
- IEEE 1284
- USB 2.0

Ports

- Power
- 4 x USB 2.0 Ports
- 10/100 LAN Port

Wireless Signal Rates* with Automatic Fallback

- 108, 54, 48, 36, 24, 18, 12, 11, 9, 6, 5.5, 2, & 1Mbps

Frequency Range

- 2.4GHz to 2.462GHz

Transmitter Output Power

- 15dBm \pm 2dB

External Antenna Type

- 2.0 dBi external dipole antenna

Modulation Technology

- Orthogonal Frequency Division Multiplexing (OFDM)
- Complementary Code Keying (CCK)

Security

- 64/128-bit WEP
- Wi-Fi Protected Access (WPA-PSK)

Transport Protocols

- TCP/IP
- NetBEUI

Management

- Web-based

* Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

Diagnostic LEDs

- Power
- Link/Activity
- WLAN
- USB x 4

Power

- External Power Supply
- DC 5V, 2A

Certifications

- FCC Part 15b

Operating Temperature

- 32°F to 149°F (0°C to 55°C)

Operating Humidity

- 95% Maximum (Non-condensing)

Dimensions

- Item (WxHxD): 7.60" x 4.65" x 1.22"

Weight

- 0.71 lbs

Warranty

- 1-Year (1-Year Warranty available only in the U.S.A and Canada)

Appendix D - Contact Technical Support

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product. U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DPR-1260)
- Hardware Revision (located on the label on the bottom of the print server (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the print server).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:

(877) 453-5465

(877) 45-DLINK

Internet Support:

<http://support.dlink.com>

For customers within Canada:

Phone Support:

(800) 361-5265

Internet Support:

<http://support.dlink.com>

Appendix E - Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below (“Hardware”) will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below (“Warranty Period”), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Software Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link’s functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by DLink in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link’s products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold “As-Is” without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow DLink to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization (“RMA”) number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. DLink will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2006 - 2007 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement:

The Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulation.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment, and the antenna of this device must be integral.

Important Note:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Appendix F - Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.3
January 23, 2007